
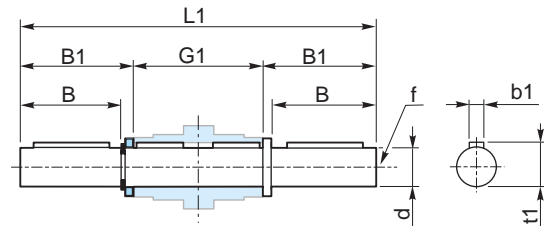


Kit assemblaggio - Accessori / Assembly Kit - Accessories


AS Albero lento semplice / Single output shaft

AD Albero lento doppio / Double output shaft

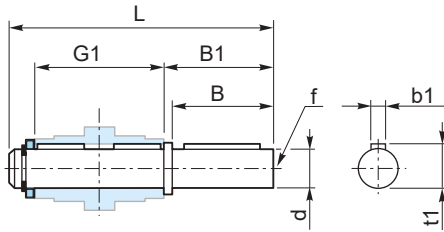

		Grandezza - Size									
Riduttore Gearbox	VP / VI	025	030	040	050	063	075	090	110	130	150
	VR	-	-	063/040	063/050 071/050	071/063	071/075 080/075	080/090 090/090	080/110 090/110	090/130	-
	VC / VS	-	025/030	025/040 030/040	030/050	030/063	040/075	040/090	050/110	063/130	063/150
d	11 g6	14 h6	18 h6	25 h6	25 h6	28 h6	35 h6	42 h6	45 h6	50 h6	
B	23	30	40	50	50	60	80	80	80	82	
B1	25.5	32.5	43	53.5	53.5	63.5	84.5	84.5	85	87	
G1	50	63	78	92	112	120	140	155	170	200	
L	81	102	128	153	173	192	234	249	265	297	
L1	101	128	164	199	219	247	309	324	340	374	
f	-	M6	M6	M10	M10	M10	M12	M16	M16	M16	
b1	4	5	6	8	8	8	10	12	14	14	
t1	12.5	16	20.5	28	28	31	38	45	48.5	53.5	
CODICE / CODE AS	AS025	AS030	AS040	AS050	AS063	AS075	AS090	AS110	AS130	AS150	
CODICE / CODE AD	AD025	AD030	AD040	AD050	AD063	AD075	AD090	AD110	AD130	AD150	

BR Braccio di reazione / Torque arm

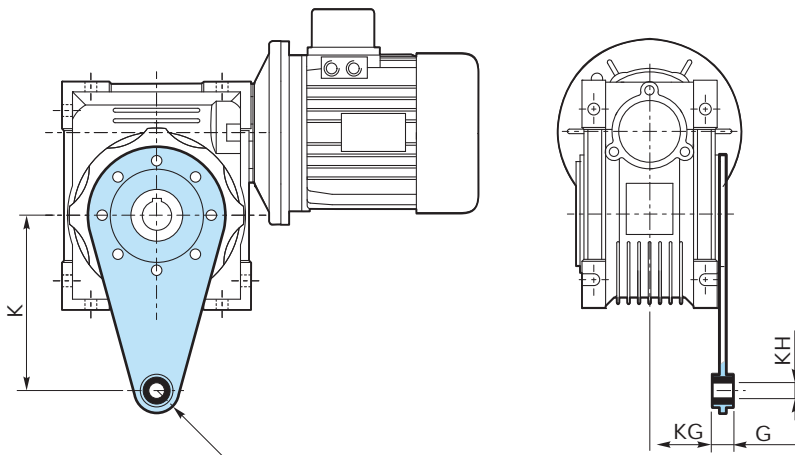

		Grandezza - Size									
Riduttore Gearbox	VP / VI	025	030	040	050	063	075	090	110	130	150
	VR	-	-	063/040	063/050 071/050	071/063	071/075 080/075	080/090 090/090	080/110 090/110	090/130	-
	VC / VS	-	025/030	025/040 030/040	030/050	030/063	040/075	040/090	050/110	063/130	063/150
K1	70	85	100	100	150	200	200	250	250	250	
G	14	14	14	14	14	25	25	30	30	30	
KG	17.5	24	31.5	38.5	49	47.5	57.5	62	69	84	
KH	8	8	10	10	10	20	20	25	25	25	
R	15	15	18	18	18	30	30	35	35	35	
CODICE / CODE	BR025	BR030	BR040	BR050	BR063	BR075	BR090	BR110	BR130	BR150	